


Appendix G. How to input the serial number.

1. Connect the receiver with PC-CDU.
2. Open Help window.

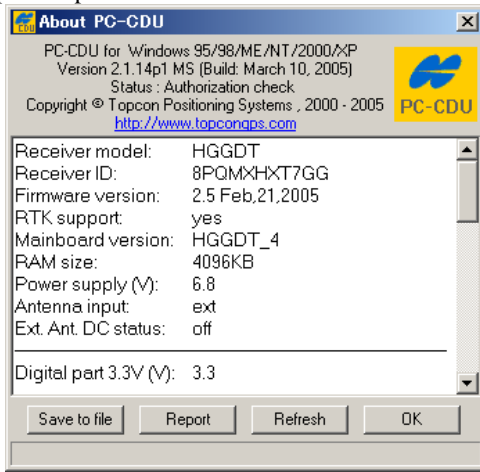

3. Select and Copy the Receiver ID.
4. Open Manual mode on PCCDU.
5. Enter the following command. And press Send Command button.


For GB-1000

%%set,/par/codedsn,ReceiverID+SN+GB-1000+Serial number.


For GB-3000

%%set,/par/codedsn,ReceiverID+SN+GB-3000+Serial number.

The following example, The receiver GB-1000, the receiver ID:8PQMXHXT7GG. The serial number : 220049

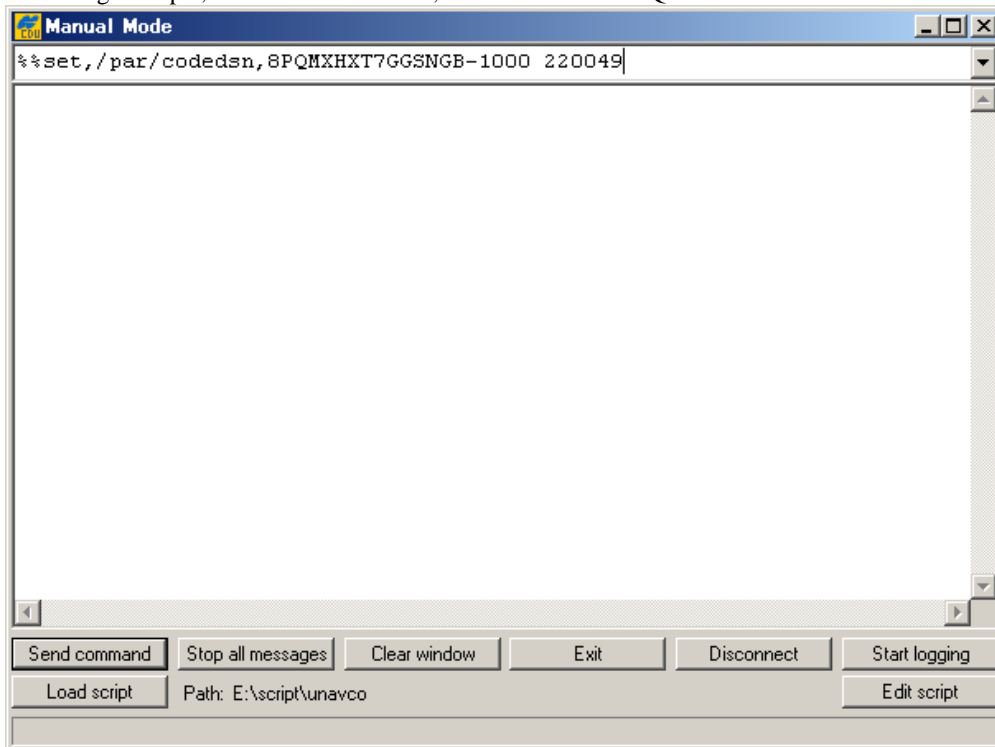

6. Choose "Tools"=>"Reset receiver". Then Press OK button.

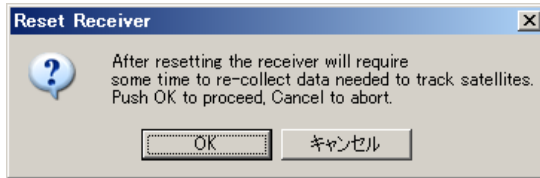

7. The following message will appear. Press OK button.



8. The Connection parameter window will appear.

9. Confirm whether the serial number was input properly with LCD display.
Go "HARDWARE INFORMATION"